


Installing *MAX LIFE™* Weldable Wear Strips

Always clean the surface that the wear bar will be welded to, ensuring it's as flat and clean as possible. Tack weld the bar into position, then stitch weld in 2" length runs, alternating ends, or similar to minimize heat input.

FOR OUTSIDE CURVES

Tack weld one end of the bar to the surface in at least three places, using a minimum of 1/2" weld in each deposit. Hammer down the unwelded end of the bar to form the curved surface (see top illustration). Stitch weld until the bar is firmly secured.

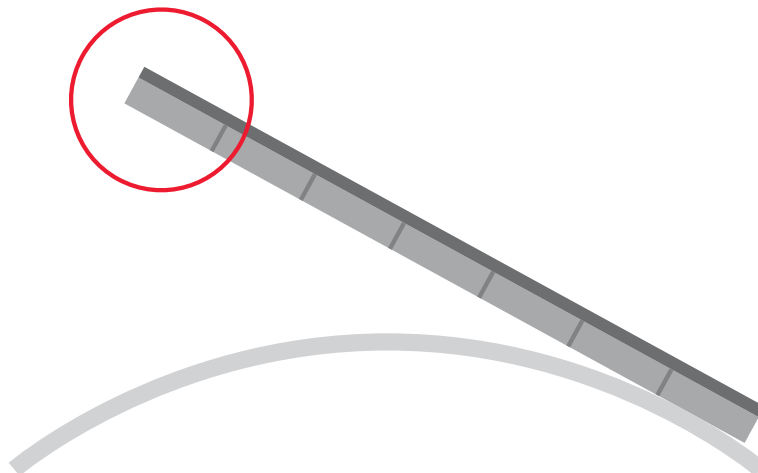

FOR INSIDE CURVES

Tack weld one end of the bar to the surface using a minimum of 1/2" weld in each deposit. Starting from the center, hammer down the bar to form the curved surface (see bottom illustration). Stitch weld until the bar is firmly in place.

