


MULTI-SHOOT SEEDING: TITAN OPENER SYSTEM



694-HLD-5000*

THIS TITAN HOLDER FITS:
CASE IH ATX 700, NH P2060,
FLEXI-COIL PH5500 & CONCORD
EDGE ON (84° SHANKS ONLY)

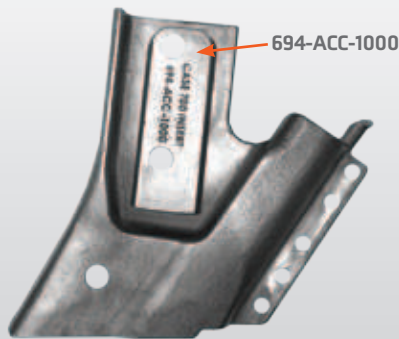

628-SBT-2000



2" wide seed spread is placed above the
center placed fertilizer trench.

3: CHOOSE YOUR TIP



620-TIP-0510

Standard tip for **620, 688 & 694** holders. Carbide inserts are placed on the nose. Hard facing is placed on critical wear points for extended life of the tip.



620-TIP-0517 **

This tip is the same as **620-TIP-0510** but is 3/4" longer giving you more vertical separation.



628-TIP-0510

Only fits the **628** holder. Carbide inserts are placed on the nose. Hard facing is placed on critical wear points for extended life of the tip.



628-TIP-0512

Only fits the **628** holder. This tip has extra long nose carbide inserts and is 1" longer than **628-TIP-0510**.

4: CHOOSE YOUR FERTILIZER

N 620-TUB-1021

NH3 tube for **620, 688 & 694** holders.

For pressurized NH3 order this tube and consult your pressurized system dealer for tubing inserts.

N **P** 620-TUB-1070

Aqua NH3 + Phos tube for **620, 688 & 694** series holders.

N **P** 620-TUB-1070XL

Same as **620-TUB-1070**, but needed when using **620-TIP-0517**.

L **N** 620-TUB-4000

Liquid or NH3 tube for **620, 688 & 694** series holders. 0.4" O.D. Stainless Steel Tube.

L **N** 620-TUB-4000XL

Same as **620-TUB-4000**, but needed when using **620-TIP-0517**.

N 628-TUB-1021

NH3 tube for **628** holders.

For pressurized NH3 order this tube and consult your pressurized system dealer for tubing inserts.

Notes:

* When installing on units other than Concord, the insert **694-ACC-1000** is needed. See page 126 for a more detailed view.

When using Seed Shoes with **620-TIP-0517, you must use the bottom setting on the holder. Fertilizer is placed at 1-1/2" at this setting.

For a more detailed view of these components see page 124-125.